



Sofa Sleep System  
Air Over Coil Technology

Patent Pending

## Inflating and Deflating Instructions

Your Air Dream™ comes equipped with a U.L. approved electric inflation pump. This pump plugs into a standard 110v household outlet. Position your sleep sofa so that accessing an electrical outlet is convenient.



### To inflate mattress:

1. Remove valve cap by simply turning cap counter clockwise.
2. After Cap is removed insert pump motor and turn clockwise until pump is engaged. Allow pump to inflate for 25 seconds. Remove pump and replace valve cap. (A motor pitch change occurs when mattress is full).
3. Replace valve cap after inflation and seal valve by turning clockwise.



### To deflate mattress:

Completely deflate.

1. Open deflation valve by lifting valve latch  
(Allow mattress to deflate before folding mechanism.)
2. Swing valve to closed position (do not lock) air trapped in mattress by locking valve could cause damage. Do not lock valve while mattress is folded

**DO NOT CLOSE DEFLATION VALVE  
WHEN CLOSING THE SLEEPER MECHANISM.**



Sofa Sleep System  
Air Over Coil Technology

Patent Pending

## Replacement Valve Instructions



1. Open deflation valve by lifting up on valve tab.
2. Remove old valve by lifting the black plastic on the outer edge of the valve toward the center. The valve will then lift off. Now you are ready to install the replacement valve.
3. To install your new valve, first open the replacement. Once open, seat the hinge area on to the hinge support, then squeeze the vinyl towards the center of the mattress opening. Simply feed the vinyl through the opening of the new valve. Once this has been accomplished make sure there are no bulges in the vinyl. Use your thumb to make sure that it is smooth. Next, lock your replacement shut and you are back in business.

*Leggett & Platt*  
INCORPORATED